


Z650 sub/12bar



- Remove stock passenger pegs from the frame and place the subcage in place.

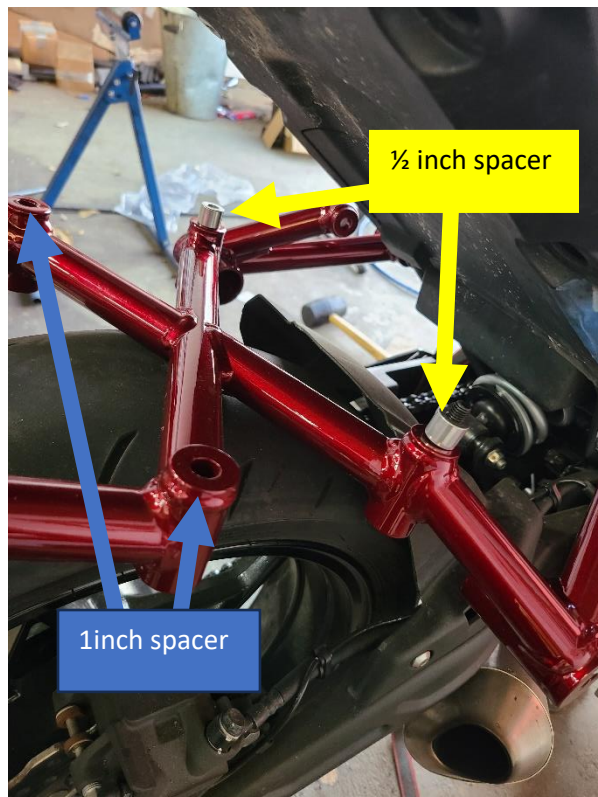

- Place the .5"inch small spacer on the tube mount.
- 1inch spacer will go on top the rear tube mount.



Lift the sub cage up and thread provided the bolt through the tubing mounts.

Install pegs and accessories to the sub cage

Torque bolts to specs