


R3 SUBCAGE/12BAR INSTALLATION GUIDE

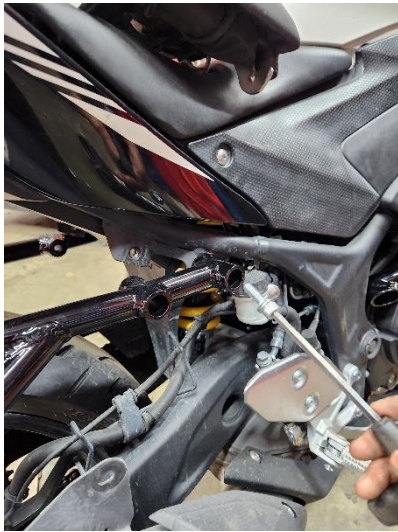


Begin by removing the factory passenger peg and the rear fender eliminator kit from the motorcycle.



Align the front mount of the sub cage to the front tab on the subframe mount.



Lift the rear end of the sub cage to fit the rear fender mounting location.

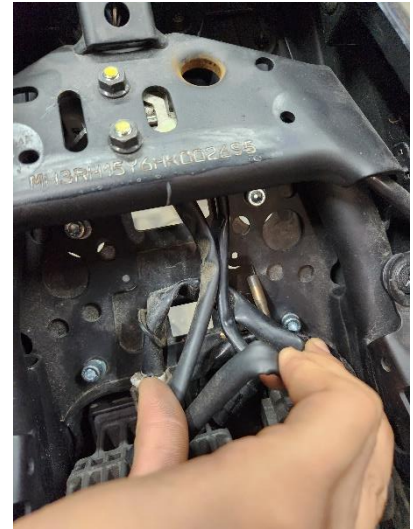


Lightly bolt up the rear with the m6 nuts and bolts through the rear fender and sub cage holes as shown.



For installing an exhaust bracket remove the OEM grommet and spacer from the rear passenger peg. Install the grommet and spacer into the new bracket provided. Soapy water will help when putting in the grommet.



If installing an exhaust bracket. Use the longer M8 bolt provided with the bracket and screw the bolt into the mount location as shown. The exhaust bracket will be place on the back side of the mounting tab as shown on the right figure. Place the M8 nut and lock washer on the back side of the exhaust tab.

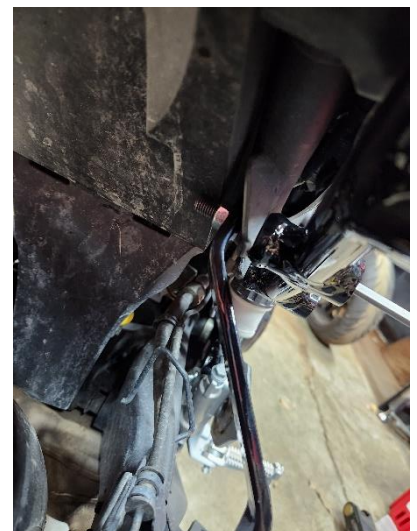



Reinstall the exhaust bolt to the bracket. Then tighten down the M8 nut on the back side of the exhaust bracket.



Install pegs to the sub cage. And all remaining accessories purchased with the sub cage.

Tighten all bolts to specs.

TORQUE SPECS			
LOCATION	SIZE	N●m	Lb-ft
REAR FENDER	M6	19	14.5
FRONT SUBCAGE	M8	47	35
PEGS	M10	95	70